

**ET&F Fastening Systems, Inc.**29019 Solon Rd.,  
Solon, OH 44139Ph: 440-248-8655 \* 800-248-2376  
Fax: 440-248-0423 \* www.etf-fastening.com

# Model 110A Spare Parts

| ITEM |         |                    | ITEM |          |                               |
|------|---------|--------------------|------|----------|-------------------------------|
| #    | Part #  | Description        | #    | Part #   | Description                   |
| 3    | 110A03  | Hex Socket HD.Bolt | 42   | 110A42   | Spring                        |
| 4    | 110A04  | Cap                | 43   | 110A43   | Core Trip                     |
| 4A1  | 110A4A1 | Cap Assembly       | 44   | 110A44   | Hex. Soc. HD. Bolt            |
| 5    | 110A05  | Seal               | 45   | 110A45   | Rubber Pad                    |
| 6    | 110A06  | Spring             | 46   | 110A46   | Magazine                      |
| 8    | 110A08  | O-ring             | 46A1 | 110A46A1 | Magazine Assembly             |
| 9    | 110A09  | Piston Head Valve  | 47   | 110A47   | Nail Liner                    |
| 10   | 110A10  | O-Ring             | 48   | 110A48   | UM. HD.Bolt                   |
| 11   | 110A11  | Seal               | 49   | 110A49   | Hex. Soc. HD. Bolt            |
| 12   | 110A12  | O-ring             | 50   | 110A50   | Magazine Cover                |
| 16A  | 110A16A | Driver Assembly    | 51   | 110A51   | Spring Washer                 |
| 17   | 110A17  | Collar             | 52   | 110A52   | Support Plate                 |
| 18   | 110A18  | Vcylinder          | 54   | 110A54   | Roller Pin                    |
| 20   | 110A20  | Bumper             | 55A  | 110A55A  | Pusher Assembly               |
| 21   | 110A21  | Set Plate          | 56   | 110A56   | Spring                        |
| 22   | 110A22  | Gasket             | 57   | 110A57   | Spring Guide                  |
| 23   | 110A23  | Body               | 58   | 110A58   | Contact Arm                   |
| 25   | 110A25  | Gasket             | 58A  | 110A58A  | Contact Arm Assembly          |
| 26   | 110A26  | Cover              | 60   | 110A60   | Contact Trip block            |
| 27   | 110A27  | Hex. Soc. HD. Bolt | 63A  | 110A63A  | Adj. Bolt                     |
| 28   | 110A28  | Spring             | 64   | 110A64   | Spring                        |
| 29   | 110A29  | O-Ring             | 65   | 110A65   | Trip Guide                    |
| 30   | 110A30  | Plunger            | 67   | 110A67   | Adj. Nut                      |
| 31   | 110A31  | O-Ring             | 69A  | 110A69A  | Sequential Fire Trig.Assembly |
| 32   | 110A32  | Rubber Grip        | 71   | 110A71   | Rolled Pin                    |
| 33   | 110A33  | O-ring             | 72   | 110A72   | Exhaust Pipe                  |
| 34   | 110A34  | Plunger Cap        | 75   | 110A75   | Stepped Pin                   |
| 36   | 110A36  | Hex. Soc. HD Bolt  | 76   | 110A76   | Tor. Spring                   |
| 37   | 110A37  | Hex. Soc. HD Bolt  | 77   | 110A77   | Stopper                       |
| 38   | 110A38  | Nose Cover         | 78   | 110A78   | O-Ring                        |
| 39   | 100A39  | Hex. Soc. HD Bolt  | 80   | 110A80   | Rubber Label                  |
| 40   | 110A40  | Driver Guide Plate | 81   | 110A81   | Rolled Pin                    |
| 41   | 110A41  | Nose               | 98   | 110A98   | Spacer                        |
|      |         |                    | 99   | 110A99   | Spacer                        |
|      |         |                    |      | 110AK1   | O-Ring Kit                    |